

X34 CARBON FIBER INTAKE, B9 RS5

034Motorsport's X34 Carbon Fiber Cold Air Intake System for the B9 Audi RS5 is engineered to provide horsepower and torque gains throughout the powerband, while improving aesthetics in the engine bay. Our intake offers OEM+ fit and finish that fits perfectly into the area of the factory air box.

Installation Spiciness Rating: MILD

Installation of your X34 Cold Air Intake system is a straightforward process that will take approximately one hour to complete.

Supplied Parts:

- (1x) X34 Airbox with 2 grommets
- (1x) Carbon Fiber inlet pipe
- (1x) 5" Air Filter
- (1x) Silicone hose coupler
- (2x) Hose clamps
- (3x) M5 screws
- (3x) M5 nylon locking nuts
- (3x) Airbox mounting spacers

Tools Needed:

- T25 Torx bit
- 8mm Socket
- 7mm Socket
- 3mm Allen
- Forked Pry tool

About This Guide

This Install Guide documents the installation process on an B9 Audi RS5. There may be minor differences depending on specific vehicle, market, options, etc.

***Be sure to clean out any intake related components to remove any possible contaminants.**

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:
customerservice@034motorsport.com

Assembly Steps

Step A

Open hardware packages.



Step B

Prepare mounting spacers with provided M5 screws.



Step C

Secure spacers to X34 airbox with M5 locking nuts and 8mm deep socket.



Step D

Attach air filter to carbon fiber inlet pipe with hose clamp.



You are now ready to start the installation process.

Install Steps

Step 1

Remove hood latch handle.



Step 2

Use a forked pry-tool to remove clips (6x).



Step 3

Pull up front of radiator cover and then slide the whole piece towards the front of the car.

**Step 4**

Remove two T25 Torx screws.

**Step 5**

Remove factory air duct from back of radiator support.

**Step 6**

Loosen two hose clamps (7 or 8mm) and remove hose.



Step 7

Pull factory airbox upwards.



Step 8

Remove rubber factory mounting feet and transfer them onto the X34 airbox spacers.



Step 9

Insert assembly into car and apply silicone coupler w/ hose clamps.



Step 10

Tighten hose clamps on silicone coupler.




Step 11

Reinstall stock (or 034 carbon fiber) air duct.



Step 12

Install provided M5 screws in place of the T25 Torx.

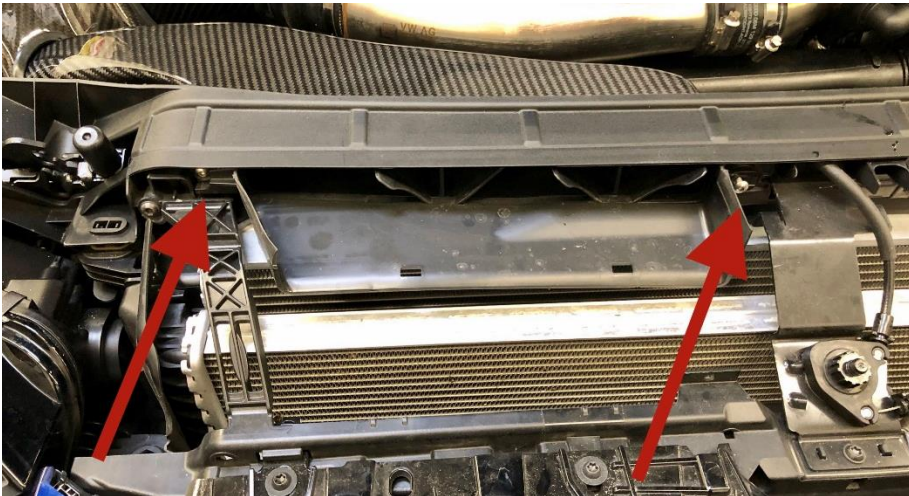

Step 13

Reinstall radiator shield.



Step 14

Install clips (6x) and hood release handle.



Step 15

Enjoy your new go-fast parts!

