

Carbon Fiber Engine Cover, B8 3.0T



034Motorsport's Carbon Fiber Engine Cover for the B8 3.0T motor is the new standard in performance meets beauty.

This kit was engineered for a simple, yet beautiful installation, with motorsport quality carbon fiber, for long lasting reliability and great looks.

Installation Spiciness Rating: MILD

Installation of the 034Motorsport Carbon Fiber Engine Cover is a straightforward process that will take approximately 10 minutes to complete.

Supplied Parts:

- 034Motorsport Carbon Fiber Engine Cover - Front
- 034Motorsport Carbon Fiber Engine Cover - Rear

Tools Needed:

- Two hands, ideally with decent fingernails
- Engine Cleaner
- Isopropyl Alcohol

About This Guide

This Install Guide documents the installation process of the 034Motorsport's Carbon Fiber Engine Cover on a 2011 Audi S4. There may be other minor differences with your vehicle depending on specific vehicle, market, options, etc.

Getting Started


Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

Install Steps


Step 1

Open the hood.

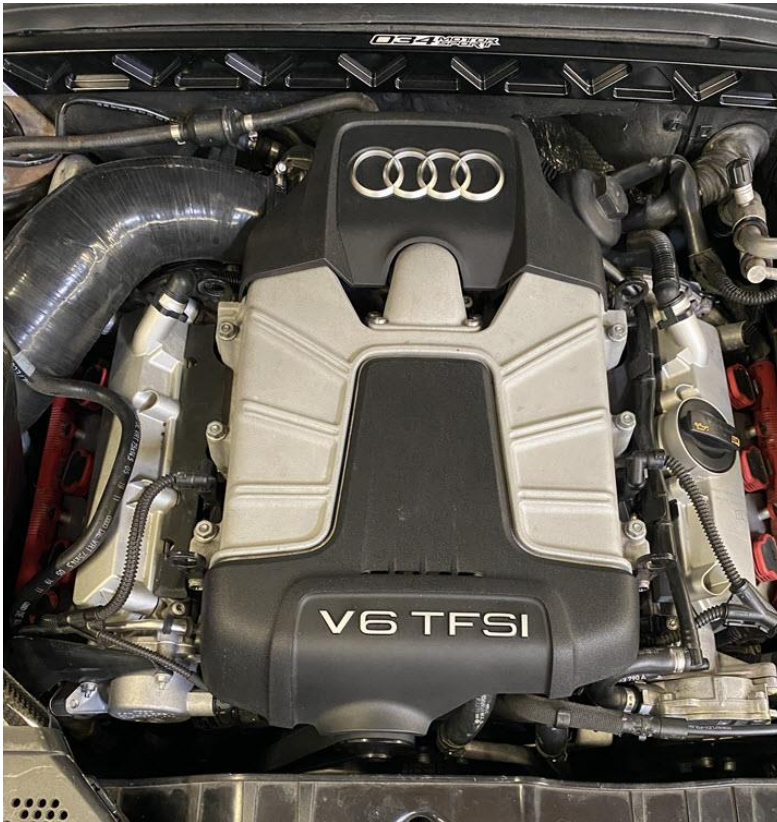

Step 2

Clean engine covers, making sure to remove all dirt, oil and grease. Do a final wipe-down with isopropyl alcohol.

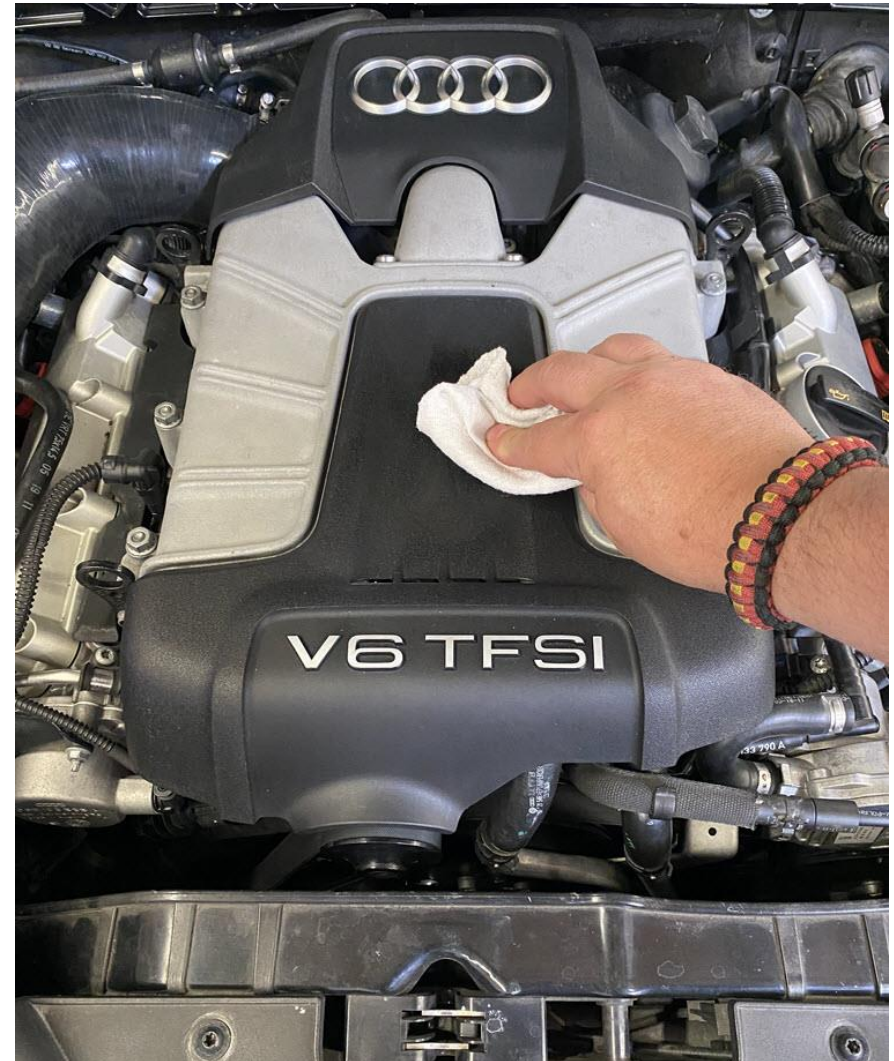


Step 3

Remove the double-sided tape backing on the back of each carbon fiber cover.



Step 4

Place each carbon fiber cover over the corresponding OE cover and press down firmly on all areas.

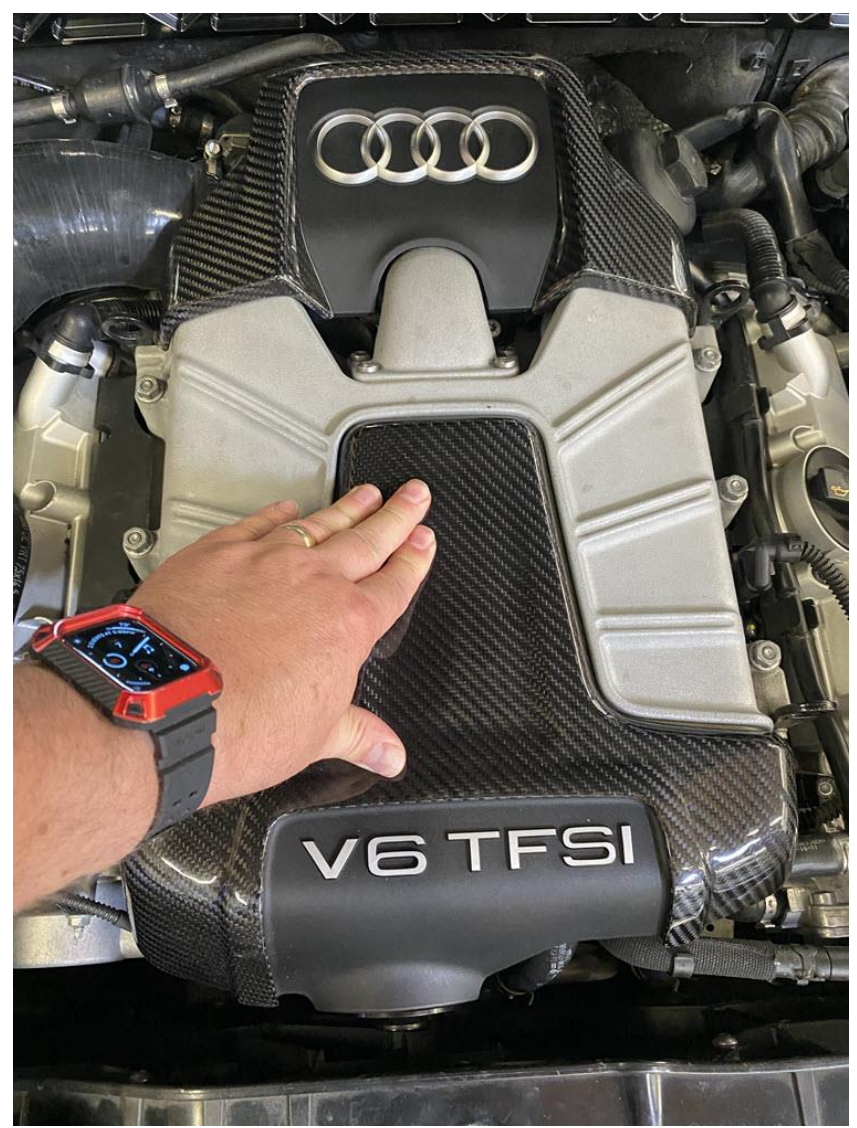

Step 5

Clean with a soft cloth, and you're finished! Congratulations!

